

Falcon

User Manual V1.1_230209

CONTENTS

- (EN) English 02
- (CN) 简体中文 03
- (DE) Deutsch 04
- (FR) Français 05
- (ES) Español 06
- (IT) Italiano 07
- (NL) Dutch 08
- (SE) Swedish 09
- (CZ) Čeština 10
- (HU) Magya 11
- (SK) Slovenčina 12
- (KR) 한국어 13
- (AR) العربية 14
- (JP) 日本語 15



Product Warranty | 製品保証カード | 产品保修凭证

Name / お名前 / 客户姓名 _____

Telephone / 電話番号 / 联系电话 _____

Address / ご住所 / 联系地址 _____

Model number / 製品型番 / 产品型号 **X1**

Product series number / 製品コード / 产品编码 _____

Name of store / 販売店 / 购买商店 _____

Date of purchase / 購入日付 / 购买日期 _____

Get your e-warranty card and e-user manual by visiting the following URL or scanning the QR code.


<https://www.wubenlight.com/pages/product-registration>

Package List

Before using this product, please check whether the contents of the package are complete.


- 1 X1 × 1
- 2 Type-C charging cable × 1
- 3 Storage bag × 1
- 4 Lanyard × 1
- 5 User manual, Warranty card × 1

About Product

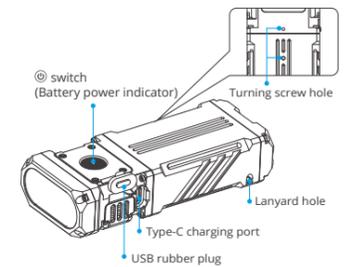

Installation

Clamp installation (optional)

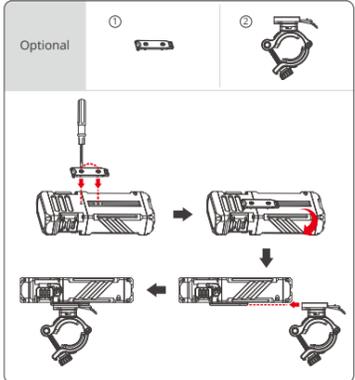

(EN) English

⚠ Warnings

- Please read user manual carefully before using the product.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the product away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the product or it will not be covered by WUBEN warranty policy.
- Please don't throw the product into fire.
- This is not a diving product, please don't use it underwater for a long time.

Operation

⚠ Reminder: The product is set to be locked by default when it leaves the factory. After receiving the product, please click four times to complete the first unlock!

- ON/OFF:** Click the Key to turn on the flashlight, and then click the button to turn off the flashlight. The flashlight has the function of memorizing the illumination brightness, and will not memorize the flashing mode and the Turbo mode.
- Default Output Selections:** When the flashlight is on, press the Key for a long time to cycle the brightness of the flashlight: Eco-Low-Med-High-Eco Cycle. Release the switch in any gear to lock the brightness.
- Instant Turbo:** In any state, double-click the Key to enter the Turbo file.
- Instant Low:** Shut down, press, and hold Key to enter the energy-saving gear.
- Flash Modes:** In any state, hit the Key three times to enter the flash mode, and hit it three times again to circularly switch the flash mode: SOS-爆闪.
- Lockout/Unlock:** When the flashlight is turned off, press the Key four times, and the headlights will flash three times, indicating that it is locked. Press the Key and the indicator will flash three times. Press the key a fourth time again, and the energy-saving gear will light up, indicating that the lock is released.

Programming mode:

Before entering programming mode, first determine which brightness level(out of four) you'd like to customize, click tfo open the product, long press to adjust the product to the level you'd like to customize, and quickly double-click the power button and hold on. The brightness level loops within the corresponding lumen range from the lowest to the highest brightness level, (when reaching the upper range, the light flashes once and starts looping from the highest to the lowest brightness level), release the power button when the desired brightness is reached, the flashlight will automatically memorize the brightness level.

Mode	Adjustment interval
Eco	20-400 lumens
Low	400-1000 lumens
Med	1000-2000 lumens
High	2000-3000 lumens

Restore Factory Settings:

In the locked state, click the Key -every 0.5 seconds-double-click the key -every 0.5 seconds-and hit the key three times. The factory setting of the flashlight turns on the lowest brightness, indicating that the key lock is released, and the factory default brightness is restored.

Maintenance

- Please use a WUBEN battery or WUBEN-recommended batteries.
- When the product indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please store the product in a dry and ventilated place.

FAQs

Problems	Causes	Solutions
Abnormal flash or failure to turn on	Check if the switch is locked Check if the switch is turned on correctly Check if the battery is no power	Unlock the switch Turn on the switch Try the battery on other products
Abnormal noise	Check if foreign matter falls in the tube Part damage	Pour out possible foreign matter Contact your seller

⚠ If your problems are still not solved yet, please contact WUBEN Headquarters for after-sales service.

Warranty Policy

1. Warranty Coverage

- 15-day replacement:** Within 15 days from the date of purchase, if the product has any quality problems, you can request a free replacement.
- 1-year warranty:** Within 1 year from the date of purchase, if the product (accessories excluded) has quality problems, WUBEN will offer free repair for WUBEN registered customers.
- Battery warranty:** WUBEN offers a 1-year warranty for the rechargeable batteries, but other included accessories are not covered by the warranty.
- Lifetime maintenance:** From the date of purchase, if the product has a problem after 1 year, WUBEN will offer paid repair for WUBEN-registered customers.
- If proof of purchase cannot be provided, it will be counted on the date of manufacture.
- If there is any dispute, the two parties will coordinate to solve it.

2. Beyond Warranty

- Man-made damage.
- Damage caused by not following the instructions.
- Damage caused by improper use of the battery.
- Abnormal wear and tear.
- Damage caused by irresistible factors.
- Gifts.

The final interpretation right is reserved by WUBEN.

Parameters

FL1 Standard	Turbo	High	Med	Low	Eco
☀	12000~3000 Lumens	2600 Lumens	1000 Lumens	400 Lumens	20 Lumens
🕒	1 min + 1.7 Hours	2 Hours	5.5 Hours	14 Hours	220 Hours
FL1 Standard	Strobe		SOS		
☀	3000 Lumens		200 Lumens		
🕒	/		/		
📏	303 Meters		1.0 Meter		
💡	23000 Candelas		IP55		
📦	CREE XHP70.2 × 3				
📏 (L×W×H)	128.5mm × 56mm × 28mm 5.06 in × 2.20 in × 1.10 in				

⚠ According to ANSI/NEMA FL1 standard, this data was tested by our laboratory by using two 21700 4800mAh batteries built in our laboratory. The data may be different due to different test environments and batteries.

Special thanks to Matt Rogers for his assistance with the Wuben X1 manual.



The product complies EMC 2014/30/EU and RoHS 2011/65/EU as amended 2015/863/EU directives. The product can be disposed of in electric waste only.

SHENZHEN SHENGGU LIGHTING TECHNOLOGY CO., LTD.
Add: Floor 5, Building A, Zhenhan Industrial Park, No. 1 Zhenhan Road, Jhuu Street, Longgang District, Shenzhen, Guangdong, China
E-mail: support@wubenlight.com
Web: www.wubenlight.com

(CN) 简体中文

⚠ 警告说明

- 使用前, 请认真阅读说明书。
- 本品在使用过程中会产生热量, 请注意保护, 以免对人体造成伤害。
- 本品为高亮产品, 请勿对人照射, 以免造成伤害。
- 请将本品放到12岁以下儿童接触不到的地方。
- 请使用劣本的电池或劣本推荐的电池。
- 请勿私自拆卸或维修手电, 私自拆卸后将不予保修产品。
- 请勿将产品投入火中。
- 本品为非潜水类产品, 请勿长时间在水下使用。

操作说明

⚠ 提示: 出厂默认锁定, 收到产品后请四击完成首次解锁!

- 开机/关机:** 单击⊙键可点亮手电, 再次单击关闭手电。手电筒具有照明亮度记忆功能, 不会记忆闪烁模式和极亮模式。
- 档位调节:** 开机状态, 长按⊙键可以循环切换手电的亮度: 节能-低-中-高-节能循环。在任何档位下松开开关, 即可锁定亮度。
- 快速极亮:** 任何状态, 双击⊙键进入极亮档。
- 快速低亮:** 关机状态, 长按⊙键进入节能档。
- 闪烁模式:** 任何状态, 三击⊙键进入爆闪模式, 再次三击可循环切换闪烁模式: SOS-爆闪。
- 锁定/解锁手电:** 关机状态, 四击⊙键, 前灯闪三次, 表示锁定, 按⊙键指示灯会闪三次提示, 再次四击按键, 节能档位亮, 表示锁定解除。

编程模式:

在下列对应档位, 双击后按着⊙键不松手, 亮度可在区间逐渐循环变化, 到达极点时灯光闪烁一次, 松开锁定当前亮度, 并且记忆成该档位亮度。

档位	调节区间
节能	20-400 流明
低档	400-1000 流明
中档	1000-2000 流明
高档	2000-3000 流明

恢复出厂设置:

锁定状态, 单击⊙键--间隔0.5秒--双击按键--间隔0.5秒--三击按键, 手电出厂设置最低亮开启, 表示按键锁定解除, 且恢复出厂默认亮度。

保养方法

- 请使用劣本的电池或劣本推荐的电池。
- 手电电量不足时, 请及时充电或更换电池, 以免影响产品正常使用。
- 请将手电置于通风干燥处存放。

常见问题处理方法

问题描述	原因	解决方法
异响或不亮	检查手电是否锁定	解锁手电
	检查开关是否正确打开	打开开关
异 响	检查电池是否有电	用充电器检测电池
	检查是否有异物插入	倒出异物
	零件损伤	请联系当地经销商

⚠ 如上述方法还没有解决您的问题, 请联系当地经销商进行售后服务。

保修规则

1. 保修范围

- 15天包换:** 自购买之日起, 15天内如产品出现质量问题, 可选择更换同型号产品。
- 1年保修:** 自购买之日起, 在劣本官方网站注册登记产品的用户, 1年内如出现质量问题, 劣本将提供免费维修服务。
- 电池保修:** 充电电池保修期为1年, 产品附加配件不在保修范围内。
- 终身维修:** 自购买之日起, 注册用户1年后如出现质量问题, 劣本将提供有偿维修服务。
- 如无法提供购买证明时, 将以出厂日期为准。
- 如有争议, 双方协商解决。

2. 不予保修范围

- 人为破坏造成产品损坏的。
- 不按说明书操作使用造成损坏的。
- 电池使用不当, 电池漏液造成损坏的。
- 非正常使用造成的。
- 不可抗力因素造成损坏的。
- 赠品。

最终解释权归劣本品牌所有。

(JP) 日本語


⚠ 安全上の注意

- 本製品は使用中に熱が発生します。Turboモード時ヘッド部の温度は55℃に達しますので、本製品のヘッド部に接触しない様ご注意ください。
- 本製品は連続点灯すると熱を持つ場合がございますが、発火や爆発の危険はありませんので安心して使用してください。
- 光を直接目に当てないでください。
- 子供の手の届かないところに保管してください。
- 本製品を修理、改造しないでください。自分で修理、改造した製品は修理保証に適用しません。
- 本製品は水中で使用しないでください。
- 火に入れるなどしないでください。
- 点灯時はライト本体及び照射面が高温になりますので、製品の破損などの危険を避けるため、他の物に触れたり近づいたりしないでください。
- ヘッド部の熱を冷却するファンが回る為、ヘッド部から小さい音がします。

内容物の名称

- 本体 X1 × 1
- Type-C 充電ケーブル × 1
- 収納袋 × 1
- 取扱説明書/保証書 × 1
- パラコードランヤード × 1

各部名称

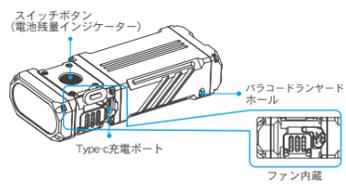


ご利用方法

⚠ 注意: 工場出荷時はスイッチロック設定状態です。ご利用の前に、スイッチを素早く連続4回(約2秒以内)押し続けてスイッチロックを解除してください。

- 点灯/消灯: スイッチボタンを押すと ON-OFF-ON と切り替わります。モード記憶機能搭載。フラッシュモードと Turbo モードは記憶しません。
- モード切替: 点灯時、スイッチボタンを長押しすると Eco→Low→Med→High と切り替わります。指を離すとモードが固定されます。
- タイック Turbo モード: 点灯時及び消灯時、スイッチボタンを素早く連続2回押し→Turbo モードで点灯。
- クイック Eco モード: 消灯時、スイッチボタンを長押し→Eco モードで点灯。
- フラッシュモード: 点灯または消灯時、スイッチボタンを素早く連続3回押し→Strobe モードで点灯→素早く連続3回押し→SOS モードで点灯→素早く連続3回押し→Strobe モードで点灯と切り替わります。再度スイッチボタンを押すと元のモードで点灯または消灯。
- スイッチロック機能: 消灯時、スイッチボタンを素早く連続4回押し(約2秒以内)→ライトが3回点滅し→ロック。スイッチロック時、スイッチボタンを押すと、インジケータランプが3回点滅。スイッチボタンを素早く連続4回押し→Eco モードで点灯しロック解除。

プログラミングモード:

4種類の明るさモード内で明るさが調整できます。4種類の明るさモードのうち明るさ調整したいモードで固定します。スイッチボタンを素早く連続2回押ししてそのまま押し続け→下記4種類のモードの調整範囲内で調光します。最低から最高の明るさレベルまでのルーメン値の範囲で、希望の明るさになったら→スイッチボタンを離す。明るさレベルは自動的に記憶します。※最高照度の上限に達すると、ライトが1回点滅し、最高照度から最低照度への調光を開始します。

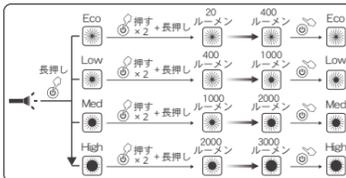


初期化:

スイッチロック状態でスイッチボタンを1回押し→間隔を空ける0.5秒→スイッチボタンを素早く連続2回押し→間隔を空ける0.5秒→素早く連続3回押し→工場出荷時設定のEcoモードで点灯。スイッチロックが解除され、工場出荷時のモード設定で初期化されました。



充電方法

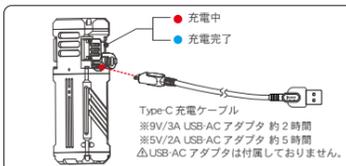

バッテリー残量の確認方法について

電池残量が100%~90%	青色点灯(5秒間表示)
電池残量が89%~40%	青色点滅(5秒間表示)
電池残量が39%~15%	赤色点灯(5秒間表示)
電池残量が14%以下	赤色点滅は消灯まで点滅します

仕様

モード	Turbo	High	Med	Low	Eco
☀	12000~3000 ルーメン	2600 ルーメン	1000 ルーメン	400 ルーメン	20 ルーメン
🕒	1分 + 1.7 時間	2 時間	5.5 時間	14 時間	220 時間
モード	Strobe		SOS		
☀	3000 ルーメン		200 ルーメン		
🕒	/		/		
📏	303 m		1.0 m		
💡	23000 カンデラ		IP55		
📦	CREE XHP70.2 × 3				
📏	379g (電池含む)				
📏 (L×W×H)	128.5mm × 56mm × 28mm (L × W × H)				

⚠ WUBEN 試験室でテストされたこのデータは、WUBEN 製 21700 4800mAh 内部リチウムイオン充電電池を2本使用した場合のデータとなります。ANSI FL15T ANDARD に準拠しており、異なる試験器具やその他の要因の為に異なる可能性があります。

メンテナンス方法

- 本製品の残量不足の表示がでた場合、充電してください。
- 本製品は換気の良い乾燥した場所にて保管してください。

故障かなと思ったら

現象	原因	対処方法
フラッシュ または点灯しない	スイッチがうまく押されていないか確認してください スイッチがロックされていないか確認する バッテリー残量を点検してください	スイッチの確認 ロック解除 充電してください
異常音	部品の損傷	販売店にご連絡ください

⚠ 上記の方法で問題が解決されない場合アフターサービスについては、お近くの販売店にお問い合わせください。

国内保証規定

- お買い上げから15日以内で、商品に不具合がある場合、お買い上げ店にて無料交換を申請することができます。
- 購入した日から1年以内に商品に不具合が発生した場合、無償修理、または同一品、同等品と無償交換いたします。
- 取り扱い説明書に従った正常な使用状態で故障した場合は、保証期間内に限り規定に基づき無料で修理交換いたします。
- 保証期間内でも次の場合は有償修理もしくは保証対象外となります。
 - 誤用・乱用及び取扱い不注意による故障。
 - 火災・地震・水害などの災害による故障。
 - 分解や不当な修理、改造及び異常電圧に起因する故障。
 - 使用中に生じたキズ、汚れなどの外観上の変化。
 - 経年変化による変色や素材の劣化。

- 登録いただいたシリアル番号と製品本体のシリアル番号が一致しない場合、本製品は劣本リチウムイオン充電電池を含む本保証の対象外となります。
- WUBEN からの贈り物(対象外)。
- ※最終的な解釈する権利はWUBEN にあります。
- 修理期間中の代替機のご用意はございません。
- 保証期間中に何らかの理由により修理及び交換ができない場合は、同等品との交換により対応させていただきます場合がございます。
- 本製品の適用範囲は本製品のみ限り、本製品の使用方法または使用不能から生じた直接的または間接的損害に対し、弊社は一切の責任を負わないものとします。
- 本保証は日本国内においてのみ有効です。
- ※海外ショップでご購入された場合は、保証及びサポート対象外となります。

製造元:

DONGGUAN CITY SHENGGU LIGHTING TECHNOLOGY CO., LTD.
販売元: WUBEN 株式会社
住所: 広東省佛山市南海区丹灶镇 7-39 タイムズスクエア D 号
TEL: 084-999-4700 FAX: 084-999-4701
Mail: info@wuben.co.jp URL: http://www.wuben.co.jp



本製品は2015/863/EU 指令のEMC 2014/30/EU 指令と RoHS 2011/65/EU 指令を遵守しています。

本製品は2015/863/EU 指令を遵守しています。